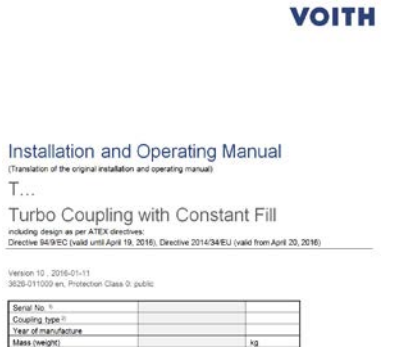

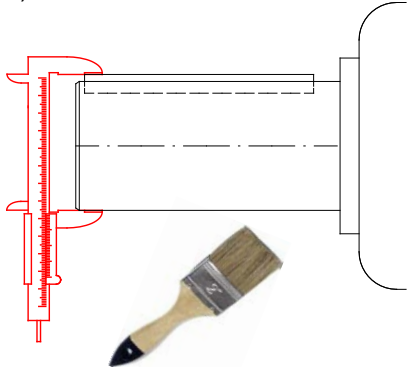
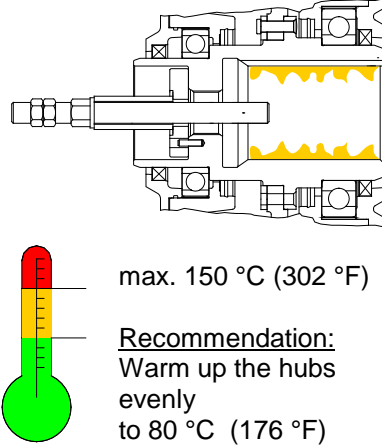
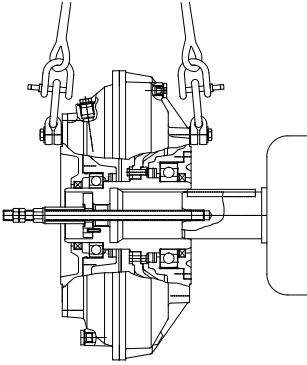
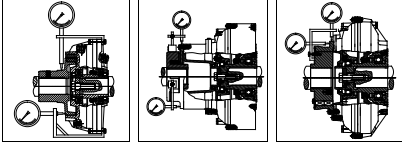



Quick Guide for Installation

T... Turbo Coupling (Basic Type T without primary coupling) 91800264910

Note:

This guide is **not** intended to replace the installation and operating manual. It just illustrates steps required during installation of a **T** type turbo coupling and provides reference to the installation and operating manual for full details.

<p>1)</p>  <p>Read and observe the latest version of the Manual 3626-011000 before starting to work.</p>	<p>2)</p>  <p>Have ready the required tools (see Chapter 8.1).</p>	<p>3)</p>  <p>Check and prepare the shafts and hubs for mounting: apply lubricant (see Chapter 8.2).</p>
<p>4)</p>  <p>max. 150 °C (302 °F)</p> <p>Recommendation: Warm up the hubs evenly to 80 °C (176 °F) (see Chapter 8.3).</p>	<p>5)</p> <p>Mounting the T type coupling with mounting device (Chapter 8.3).</p>  <p>Mount the input and output hub (see Chapter 8.3).</p>	<p>6)</p> <p>Alignment:</p> <p>Select the installation length (see Chapter 8.5.3) according to the connecting coupling (see Chapter 8.5.1).</p>
<p>7)</p> <p>Fix the dial gauges (see Chapter 8.5.5).</p>  <p>Align the shafts (see Chapter 8.5.5).</p>	<p>8)</p> <p>Fill in the specified quantity of operating fluid:</p>  <p>(see Chapter 9 and 10).</p>	